

Shows the currently selected Zone or Input the remote will control

Selects one of the 12 available Audio Sources

Shows signal information for currently selected input

Displays on screen menu for Input selection

Use to scroll thru available Source Inputs for the selection of the active Zone


Turns off front Panel Information Display also displays On-Screen Functions on the McIntosh Music Server and a variety of other McIntosh Components

Used to navigate the Menus On-Screen, make selections and used for variety of McIntosh Components

Activates the Setup Mode Menus and/or exit the Setup Mode

Use to select tuner presets, disc tracks or any numbered operation

Used to Tune Up or Down the Selected Band for Source Components

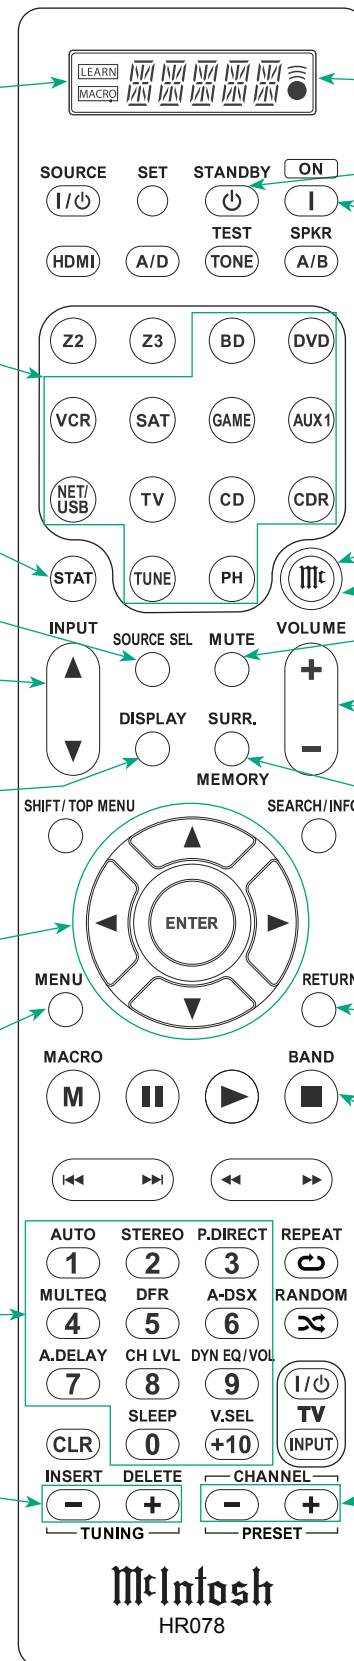

Press to Power the MX121 OFF

Press to Power the MX121 ON

Selects Main Zone Control

Mutes the audio


Adjusts the volume level up or down

Used to switch between various sound processing Modes

Returns to the previous menu and/or exits Setup Mode

Press to either change Bands or Re-view Presets Stations with an external McIntosh Tuner connected, and select certain functions on a variety of McIntosh Components

Selects Channels and Presets for Pre-Programmed Source Devices

*Note: In order for some of the Remote Control Push-Button Commands to be implemented by the MX121, such as activating the MENU SETUP Function, the LCD Display on the Remote Control needs to indicate "Mc". If the LCD Display does not indicate "Mc", press the  Push-button first before pressing the MENU Push-button.*

MX121 Remote Control Secondary Functions

Used to Turn On/Off the Selected Zone or Source Input

Press the Set button when programming the remote to control other Components

Activates either the HDMI 1 or HDMI 2 Output for the Main Zone

Manually toggles between Analog, Digital, HDMI and 7.1 Channel Source Inputs

Control Function for Zone 2 or 3

Use when selecting Internet Radio presets, and used for Source Component Menu navigation

Pause Control for Internet Radio and for Source Component Devices

Use for Learning/Programming Remote Control Macro Functions

Skip and Search buttons for Internet Radio and Next/Back, Fast Forward/Fast Back for Source Components

Selects the MX121 Stereo Playback mode

Automatically selects Optimum MX121 Surround mode

Cycles through various MP3/MAV Sound Processor Modes

Selects various Audyssey MultEQ XT modes

Select and Adjust individual Channel Level for the current Source Input


Manually adjust the Sound Process Audio Delay to be in sync with the Video

Activates Sleep Timer

Clears Recorded Macros

Deletes characters when using keyboard screen

Inserts characters when using keyboard screen

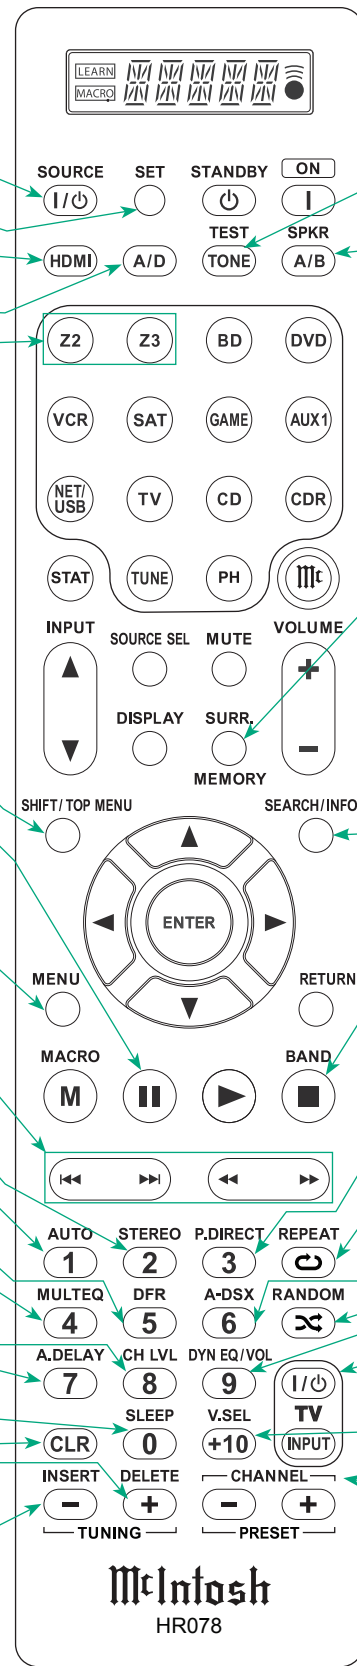

Activates the Test Tone Signal for manually adjusting Channels Output Levels

Switches between Main Zone Outputs when configured in Setup Mode

Use for memorizing Internet Radio Station

Changes Display Modes when playing iPod source, also displays keyboard when renaming menus

Stop Control for Internet Radio, and for Source Components

Optimizes Audio Playback by minimizing Sound Processing and optionally turns Video and Display circuits Off

Repeat Playback Function for Source Component

Adjusts Audyssey DSX™ Sound Stage parameters when Front Wide and/or Height changes are used

Random Playback Function for Source Components

Selects MultEQ® XT, Dynamic EQ® and Dynamic Volume® settings

Power On/Off and Input Select for Pre-programmed buttons for TV/Monitor Control

Selects new Video Input when playing Audio Source

Use when Storing or selecting Internet Radio Stations